

PACKAGE CONTENTS:




Latest software and manuals available on
www.flirsecurity.com/pro



For support, visit
www.flirsecurity.com/pro

Connecting your system

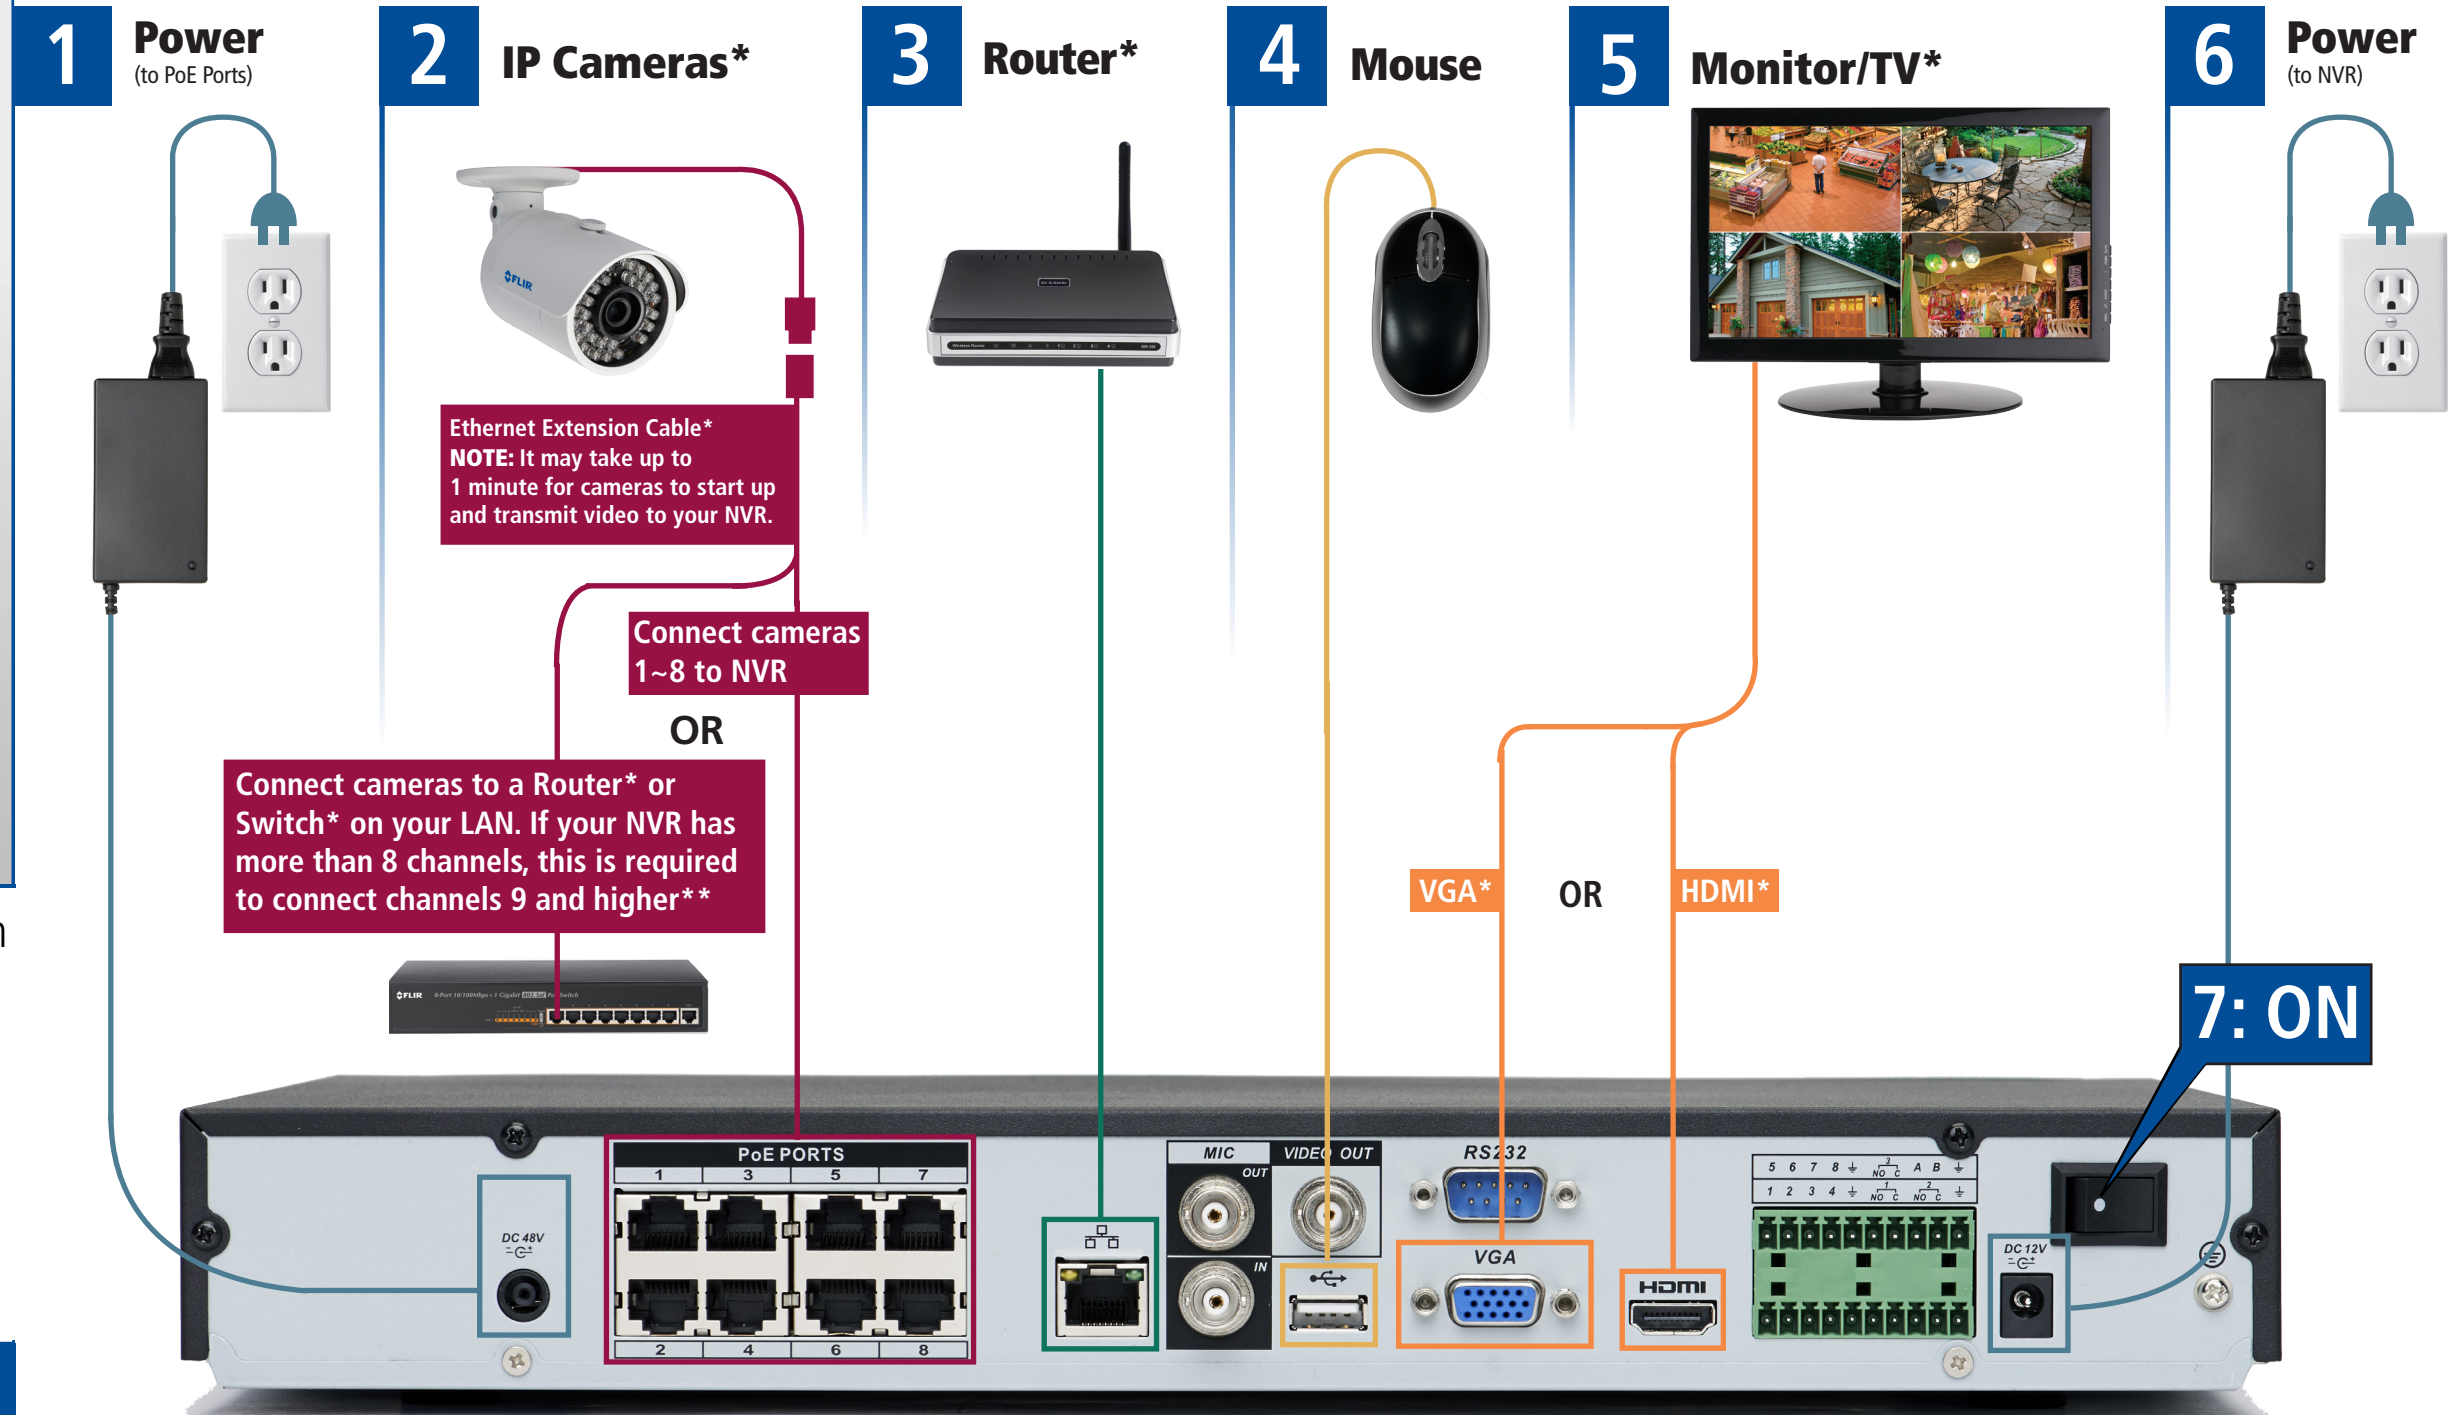

*Not included/sold separately.
**See reverse to add cameras from your LAN; 8-port PoE switch accessory sold separately (model: ACCDPS281).

Using the Mouse



1. Left-Button:

- Click to open the Navigation Bar.
- **During split-screen display mode:** Double-click an individual channel to view it in full-screen. Double-click again to return to the split-screen display mode.
- **While navigating menus:** Click to open a menu option.

2. Right-Button:

- **During Live View:** Right-click anywhere on the screen to open the Quick Menu.
- **Within system menus:** Right-click to exit menus.

3. Scroll-Wheel:

- Use to change menu options.


Adding Cameras from the LAN

NOTE: Please visit www.flirsecurity.com/pro for a list of compatible IP cameras.


1. Connect the camera to a router or switch on the same network as the NVR.

2. Right-click and select **Device Search**. Log in using the admin account (Default User Name: **admin**; Default Password: **000000**).

3. Click **IP Search**.

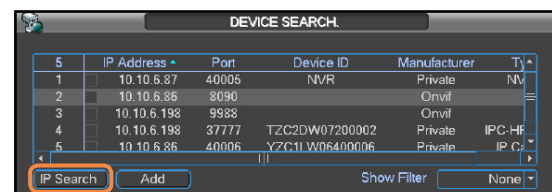


4. Check the camera(s) you would like to add and click **Add**.

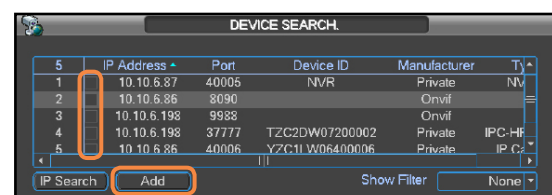

5. If the Status indicator is green, the camera is connected and no further configuration is required. Click **OK** to save changes.

6. If the Status indicator is red, click . Update the following information, as needed.

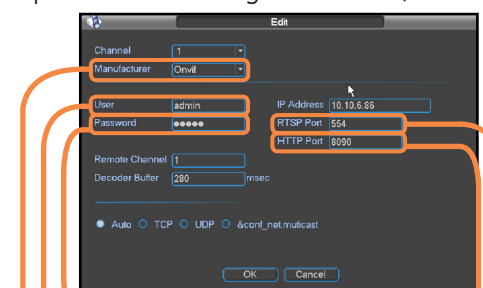

- Password:** Enter the camera's password.
- User:** Enter the camera's user name.
- Manufacturer:** Select the manufacturer of your IP camera.
- HTTP Port:** Enter the camera's HTTP Port.
- RTSP Port:** Enter the camera's RTSP Port.

NOTE: See the manual for your IP camera for details on the default username, password, or ports used.


7. Click **OK**. Click **OK** again to save changes.

Setting the Date & Time

1. In the main viewing mode, right-click and click **Main Menu**. If needed, log into the system using the admin account (Default User Name: **admin**; Default Password: **000000**).

2. Click **Setting > General**.

3. Enter the current date (MM DD YYYY) and time (HH MM SS) under **System Time**. Set the date and time. Click **Save**.

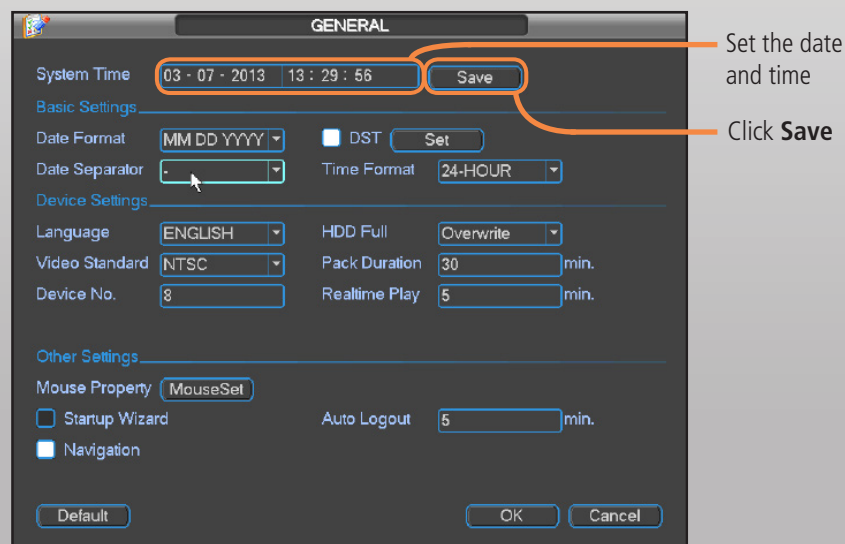

4. Click **OK**.

NOTE: See the included manual on CD for details on configuring Daylight Savings Time and Network Time Protocol.


Searching & Playing Back Video

1. From live view, right-click and then click **Search**. If needed, log in using the admin account (Default User Name: **admin**; Default Password: **000000**).

2. Use the calendar on the right to select the day to playback.

3. Use the drop-down menus to select the channels you would like to playback. Click the display options () to playback multiple channels simultaneously.

4. Click inside the video bar to select the playback time.

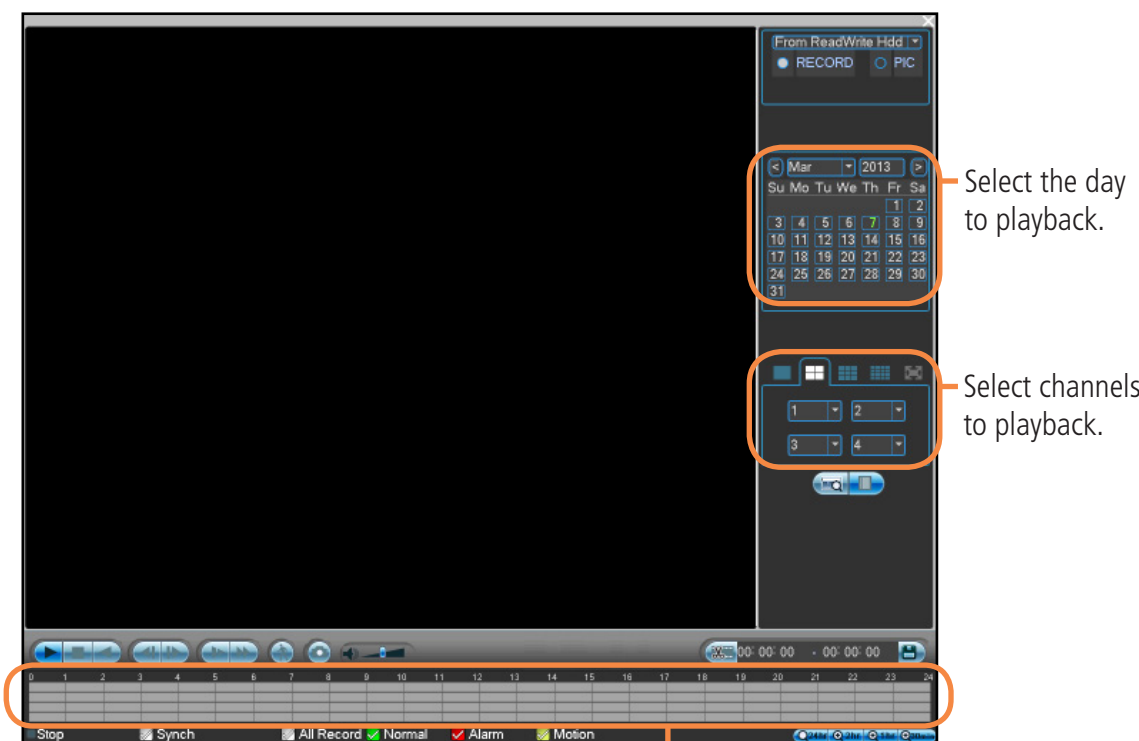

Click inside the bar to select a playback time.